

# Activating licenses advanced

After the successful license server installation and registration, you need to provide the licenses to the license server that it is to serve. Advanced license activation is used to activate available licenses to a specific license server.

## About this task


You use the Advantest License Portal to map the licenses to your license server.

## Before you begin

You need to have a login to the Advantest License Portal. If you are not able to login, get in contact with your Advantest representative.

## Procedure

1. Open the Advantest License Portal: <https://license.advantest.com/> and login.
2. Select the tab **License Management**.
3. From the **License Activation** section, select **Advanced Activation**.
4. Select the license server on which the licenses are to be activated.

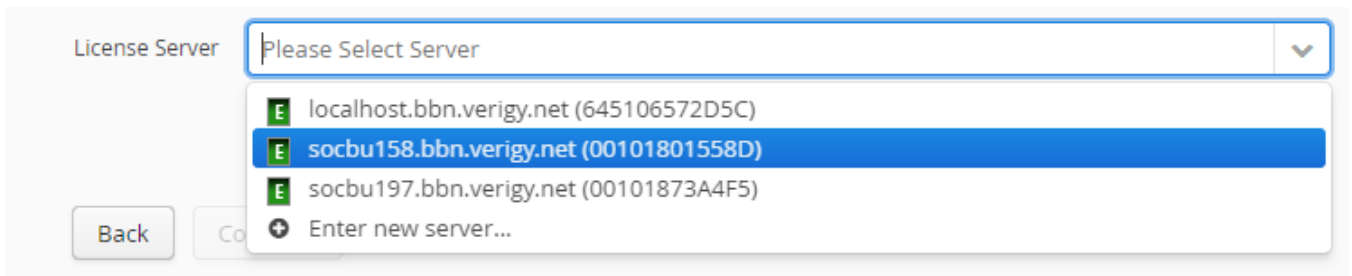

The screenshot shows a web interface with a 'License Server' dropdown menu. The dropdown is open, displaying a list of server options. The first three options are marked with a green 'E' icon, and the second option, 'socbu158.bbn.verigy.net (00101801558D)', is highlighted in blue. Below the list is an option with a plus sign and the text 'Enter new server...'. To the left of the dropdown are 'Back' and 'Continue' buttons.

- E** - FNE license server
- C** - FNP license server

5. Click **Continue**.

The license table is displayed, listing the licenses available for activation on the selected license server.

	Product	Total	Remaining	Activate	Serial Number	Actions	
X	Filter					Fill All	
	N5922UPRM: MB AV8 S&M: 2 cores 100 to 200Mmps AWG upgrade	1	1	Count		Fill	
	SSBXPSS-EM360-1YR-NL: S&S Production Solutions - EM360 Maintenance and Plan...	1	1	Count	MY04603050	Fill	
	SSBXSUS-SMARTTEST-1YR-NL: SmarTest (SOC) on-line SW	1	1	Count	MY04603050	Fill	
	SSBXSUS-VALUEPKG-1YR-NL: S&S (SOC) Value Package SW	1	1	Count	MY04603050	Fill	

Note: If the entitlement ID is not available in the selection list, you can add the organization by selecting: **Entitlement not listed..**, entering the entitlement ID, and clicking **Assign**. The organization of the entered entitlement ID is assigned to your user setup and enables you to work on the licenses of that organization.

Assign new organization ×

Enter a valid entitlement ID below, e.g. 1234567\_OID\_aaaa-bbbb-3333-...

6. Enter the data for the licenses you want to activate. For example, the count value (number of licenses that you want to activate) and any other mandatory license information.

Click **Fill** to enter the remaining count to the **Activate** field of the associated license. **Fill all** enters the remaining count of all licenses in the **Activate** field.

Note: Filter the list of licenses using a text string in the **Filter** field (clear with the **X** button). Click a column header to order the entries. Customize the page from the drop-down menu.

7. Click **Continue**.

The **Verify the selection** section is displayed.

8. Review the license summary.

If you want to change any values, click **Back** to reopen the License page.

Note: To cancel the license activation request, click a tab (**License Management** or **Portal Home**).

You can only correct mistakes after activation if you are working with a FlexNet Embedded license server. Changes cannot be made on FlexNet Publisher license servers.

9. When you are sure that the information has been entered correctly, click **Generate Licenses**.

## Results

The licenses are generated and the **License Activation Result** page is displayed, from which the following options are available:

- **Download license** - Download the license file for the newly generated licenses. If you still need to activate further licenses on the same license server, download the license file after completing all activations.
- **Proceed with Simple Activation** Enables you to activate the next license from the entitlement ID.
- **Navigate to the Overview Page** - Opens the License Management start page.

## What to do next

For FlexNet Embedded license servers that are connected to the internet, you perform a `sync-fne-server` action on the license server for immediate usage or wait for the next automatic server synchronization.

Note: The automatic server synchronization is executed every 12 hours.

Alternatively, you can use the FNE Server viewer to activate the synchronization of the licensing server.

File Edit View History Bookmarks Tools Help

FNE Server Viewer

fneLic\_Srv\_01.mycom.com:7077/0/capability-sync

Learning Products Next Topic ID DOC CRs (NR) SDE DOC-CRs Eiger-Granite DOC CRs ALL Ds TeamForge

# ADVANTEST FNE Server Viewer

**FNE\_Lic\_Svr\_01**

- Clients
- Features
- Offline server update
- Synchronization**

### Capability Synchronization

Synchronize

Last successful back office connection: 2019-04-04 16:14:13

Copyright 2019 - Advantest Corp.

Note: If the FlexNet Embedded license server is not connected to the internet, you must download the license container file and upload it to the FlexNet Embedded license server.

Revision #1

Created 2025-10-15 09:58:48 CEST by Ekaterina Nikitina

Updated 2025-10-15 09:58:49 CEST by Ekaterina Nikitina