


FNE Server Viewer


Information: difference between connected client and connected tester client?

What is the difference between # connected clients and # connected tester clients in the FNE server viewer?

If you have a look at the left bar of the FNE server viewer then you have a small graph showing the # of connected clients and # of connected tester clients:

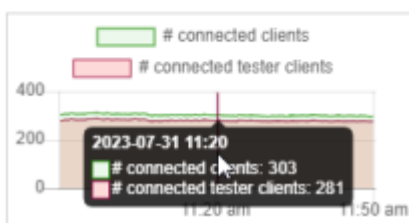

If you click on menu "Clients" you are getting a bigger presentation for this graph:

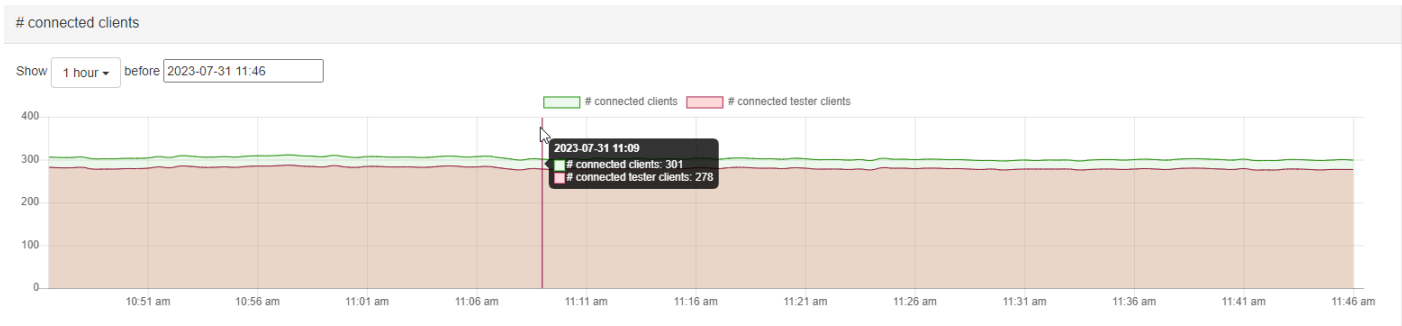

Meaning of

- **# connected tester clients:** shows the amount of **testers** that are connected to the server.
- **# connected clients:** shows the amount of **clients** connecting to the license server, this will be higher because of SmartTest 8. SmartTest 8 has two clients running on one tester, one is the called TPLF client and the other is the TOOLS client. TPLF handles the most important licenses, without them Smartest would stop right away. TOOLS are for example S&S Licenses, which are optional.

Revision #2

Created 2025-10-15 09:54:07 CEST by Ekaterina Nikitina

Updated 2025-12-09 13:10:45 CET by Ekaterina Nikitina