

License Portal

The Advantest License portal combines all license-related management functionality into one tool.

To access the Advantest License Portal, sign in under: <https://license.advantest.com/>.

The portal is divided into the following main areas for both FLEXIm technologies - FlexNet Publisher (FNP) and FlexNet Embedded (FNE):

- Special licenses requests
- License management (FNE server setup, License activation, FNE license re-hosting, License overview)
- License Renewal (for FNP licenses)
- **Optional:** Cloud Server Status for Advantest Cloud License Server monitoring (ACLS)

If you want to switch between areas and all tabs are not visible, click **Portal Home**.

Note: To access licenses in the Advantest License Portal, users must be assigned to an organization. This enables the users to access all licenses of the associated organization. The organization hierarchy includes a Master level to enable the grouping of regional organizations to a higher level world wide master organization. Users can only belong to one master organization.

- [Signing in to the License Portal](#)
- [Special License portal](#)
- [License Management portal](#)
- [FNP License Renewal portal](#)
- [License Portal reference](#)

Signing in to the License Portal

You must be signed in to the Advantest License Portal to access license portal functionality. An associated account is necessary.

Before you begin

You must know your Advantest customer credentials, which are based on your email address.

Password reset is possible on the general Advantest License Portal Login page.

All entries in the login screens are **case sensitive**.

Login credentials are the **same** as for the myAdvantest login.

Procedure

1. Sign in to the Advantest License Portal by opening the following URL in a Web browser (Edge, Chrome or Firefox):

<https://license.advantest.com>

Advantest License Portal Login

License Portal Downtime

The License Portal will be regularly down for maintenance tasks:
Saturdays, from 2:30 PM - 3:30 PM CET ([Time Zone Converter](#))

Annual Renewal Information

The perpetual licenses renewed / activated in 2025 will expire on **March 31st 2026**.
The next renewal phase will start in March 2026.

Self-Registration

If you haven't yet registered yet, request access by clicking on the **Register** button.
Your **myAdvantest** username and a valid entitlement ID are required.

Documentation & Guidance

For detailed documentation and guidance on how to use the License Portal,
please visit our official documentation page: [License Help Center](#)

Login information

For customers only:
If you have forgotten your password, request a new one here: [Forgot Password](#)

ATTENTION: Your username is case sensitive!

Username *

Password *

* Mandatory fields.

2. Type your customer credentials and click **Login**. For registered customers, **Username** requires the email address provided during registration. The Licensing page opens.

Note: You require a registered account to be able to sign in. Alternatively, click **Register** and complete the registration process with myAdvantest username a valid entitlement ID. If registration fails, contact your Advantest representative providing your myAdvantest username (do not provide your password), and the error message you received during signing on.

Welcome to the Advantest License Portal

Please select the appropriate tab at the top to go to the desired function:

- **Special Licenses**
Here you can get special licenses like emergency licenses to solve a manufacturing problem caused by a failed or otherwise inoperable license server.
- **License Management**
section where you can manage your licenses and perform licenses tasks like activation, re-hosting, setup license server, upload request files and download response files.
- **FNP License Renewal**
allows to renew FNP licenses in March every year.
- **Portal News**
shows license portal release and downtime information.

Please do not use Microsoft Internet Explorer!

Results

This opens the Advantest License Portal page, giving access to:

- Special Licenses (Advantest employee only)
- License Management
- FNP License Renewal
- **Optional:** Cloud Server Status
- Portal News

What to do next

To sign out after you have completed your tasks, click Log Out in the upper-right corner.

Special License portal

The Advantest Special License sub-portal, accessed from the Advantest License portal, is your access point for requesting emergency licenses. You can obtain emergency application software licenses or hardware feature licenses to solve a manufacturing problem caused by a failed or otherwise inoperable or inaccessible license server.

To access the Advantest Special License feature, you must sign on with your Advantest customer credentials.

Note: Emergency licenses are made available for emergency circumstances and are valid for 10 days only, providing you with time to restore operation to your original license server or to rehost your full licenses.

When to request emergency licenses

Emergency licenses are required and are provided in the following cases:

- The license server suffers a serious malfunction (for example, motherboard or hard disk drive failure). See also [Installing emergency licenses after failure and replacement of the license server](#).
In the case of a server that has been catastrophically damaged, you will also have to rehost your original licenses. See [Re-hosting FlexNet Embedded licenses](#). Rehosting can take several days during which time emergency licenses can be used to allow your testers to continue running.
- Your network is not accessible. See also [Installing emergency licenses for license servers unavailable due to network problems](#).

What you should do before requesting emergency licenses

When applying for emergency licenses, you should be aware of the following:

- Notify your Advantest sales representative as soon as possible, preferably by email, before you apply for a license.

- Take all reasonable steps to restore operation to your original license server or rehost your licenses.

What you should know when requesting emergency licenses

To receive an emergency license, you must provide the following information:

- Valid user account to sign in to the Advantest Special License portal.
- Host ID of the failing/affected license server.
- Host ID and hostname of the replacement license server.

Related information

[Signing in to the License Portal](#)

[Requesting emergency licenses](#)

License Management portal

To access the Advantest License Portal, sign on under: <https://license.advantest.com/>.

The screenshot shows the Advantest License Management portal. At the top left is the Advantest logo. On the top right, the user 'jjaw.zhang' is logged in, with 'Log Out' and 'Help' links. Below the logo is a navigation menu with five tabs: 'Portal Home', 'Special Licenses', 'License Management' (which is selected and highlighted in blue), 'FNP License Renewal', and 'Portal News'. The main content area is titled 'Welcome to the Advantest License Portal'. Below the title, it says 'Please select the appropriate tab at the top to go to the desired function:'. There are four bullet points with descriptions: 'Special Licenses' (emergency licenses for manufacturing problems), 'License Management' (manage licenses, activation, re-hosting, etc.), 'FNP License Renewal' (renew licenses in March), and 'Portal News' (release and downtime info). At the bottom of the main content area, there is a yellow-bordered box with the text 'Please do not use Microsoft Internet Explorer!'. In the bottom right corner of the page, there is a copyright notice: '© 2024 ADVANTEST CORPORATION - V2024.1'.

The License Management sub-portal contains the following areas for both FNE and FNP licensing:

- **Activating licenses** to a license server
- **Downloading license** containers and files
- **License overview**

The following extra features are available for FNE licensing:

- **Registering** new FNE servers - and uploading the request file
- **Re-hosting** FNE licenses

License Management Dashboard

Welcome **jia.zhang**, to the Advantest License Management Portal.

This Dashboard page is the main page for handling FNE  and FNP  licenses.

Inside this portal you can do server registration, license activation, re-hosting, download and other license maintenance tasks.

New FNE License Server Setup:

[Register server](#)

License Activation:

[Activation via entitlement \(Sohle Activation\)](#)

[Advanced Activation](#)

[Contract Activation](#)

Re-host FNE Licenses:

[Re-host Licenses](#)

[Download Removal File \(offline server only\)](#)

[Upload Removal Confirmation File \(offline server only\)](#)

[Check License State](#)

Download Licenses:

[Download](#)

License Overview:

[Entitlement overview](#)

License Server Setup

Setup a new FNE License Server and upload of the registration response file

License Activation

Activate new licenses to be used either on a FNE License Server or on a legacy FNP license server.

License Re-hosting

Move FNE licenses between license servers. Only FNE licenses can be re-hosted in the Advantest License Portal the legacy FNP license cannot be moved around

For customers with Advantest Service Agreement only. Customers without Service Agreement should contact their sales representative for license rehosting

License Download

Download of legacy FNP license files or download of FNE license container to be used for non internet connected FNE license servers

License Overview

Listing of all licenses and entitlements belonging to the your company

Related information

- [Activating licenses](#)
- [Rehosting FlexNet Embedded licenses](#)

FNP License Renewal portal

The Advantest Renewal Portal page provides you an overview of the high-level tasks that you must complete to renew your FNP licenses.

To access the Advantest License portal, sign on under: <https://license.advantest.com/>.

There are three main steps:

- **Assigning entitlements to your account** so that you can renew the associated FNP licenses
- **Renewing** the FNP licenses for which you are responsible
- **Download** the renewed FNP licenses

The License Renewal Dashboard flow chart includes shortcut links to these main pages.

ADVANTEST. heike klein | Log Out | Help

Portal Home | **Renewal Dashboard** | Assign entitlements ~ | Renew licenses | Download licenses | Reports | License comparison

License Portal Renewal Dashboard

Welcome heike Klein, this page will guide you through the Advantest license renewal process.

Assign entitlements
You have no entitlements assigned to you.

↓

↓

Step 1: Entitlement Assignment
Make sure to assign all entitlements to your account that you are responsible for

- entitlements of companies you support
- entitlements for leasing systems
- other entitlements not covered above

Prerequisite for all renewal activities is the link between the entitlement and your user account.
Note: You can also assign entitlements to the user accounts of your customers.

Step 2: License Renewal
Here you can renew your licenses

- to the same license server(s) as in the previous year
OR
- move licenses to a new license server(s).

Step 3: License Download
Here you can download the license container for each server.

© 2019 ADVANTEST CORPORATION - V2019.6.2

For detailed information on assigning entitlements, renewing licenses, and downloading renewed licenses, see [FNP License Renewal](#).


Related information



- [Entitlements](#)
- [Renewing your licenses](#)
- [Downloading licenses](#)
- [Viewing license information and reporting](#)
- [Managing entitlement and license server aliases](#)
- [Downloading the data for license comparison](#)

License Portal reference






For license activation, license overview, FNE license rehosting, the license data is presented in a table. This topic describes the column titles, icons and action controls.

Column Titles and icons

Titles	
Product	Entitlements with features and S&S licenses. Demo licenses are associated with a tester. Manually enter the system serial number.
Total	Total number of available licenses for the associated product.
Already activated	Number of activated licenses from the total available for the associated product.
Remaining	Number of licenses available for activation from the total available for the associated product.
Activate	Enter the number (count) of licenses that you want to activate from the total available for the associated product.
Serial Number	System serial number automatically entered from the associated entitlement ID. One-time SmarTest update licenses require manual entry of the serial number and selection of the software version. Demo licenses are associated with a tester. Manually enter the system serial number.
SW Version	SmarTest software version with which the license is associated.
Start Date	Date from which the license is active. Click on the calendar icon and select a date from the calendar displayed:  23.09.2018 <div data-bbox="815 1688 1485 1944" style="border-left: 2px solid #00a0e3; padding-left: 10px;"><p>Note: Demo licenses are time-limited. A start date must be selected. If you are using 30 day licenses sequentially, enter count 1 and specify a start date. After generating the first license, start the simple activation again and re-enter count 1 and the next start date.</p></div>
Expiration Date	Date when the license expires (at 24:00 midnight). For example, if the expiration date is 2024-06-30, the license expires at midnight (end of the day) on 30-June-2024.

Titles	
Organization	Customer name. As some customers have several sites, a customer can have several organization names.
Org ID	Unique (numeric) identifier of the organization name of the customer.
Entitlement	A unique identifier for a specific entitlement. Available on the entitlement certificate and is required for license activities such as activating licenses.
License Server	License server to which the license is activated or shall be activated.
Pending Removal	<i>For FNE rehosting only:</i> If a number is displayed in this field, the removal of licenses from the original FNE license server has not yet been confirmed with the Licensing Back-Office. As long as a pending removal value is displayed, these licenses cannot be activated to another FNE license server.
Re-host count	<i>For FNE rehosting only:</i> Enter the number (count) of licenses that you want to remove from the FNE license server to activate the licenses to another FNE license server.
	FNE license server.
	FNP license server.

License Management portal controls

Control	Description
Column sort	Click on a column header to sort the table entries in accordance with the column values.
Filter	Field used to filter the Product list by text string.
	Click to remove search text from the filter field.
	Click to display or hide optional columns.
	SmarTest software version number with which the license is associated.
	Enters the remaining count to the Activate field of the associated license.
	Enters the remaining count of all license to the Activate field.

Control	Description
 23.09.2018	Select a license period start date from the calendar.